


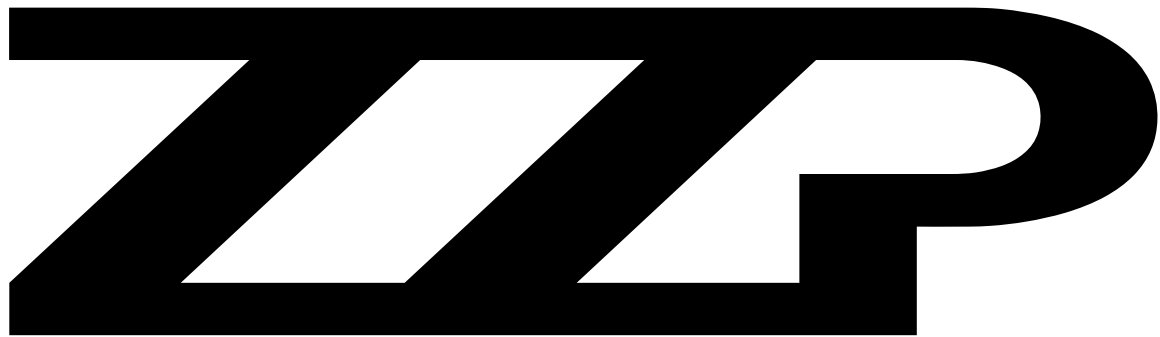


ZZPERFORMANCE

Installation Instructions

ZZP Rear Sway Bar

Gen 1 Chevy Cruze

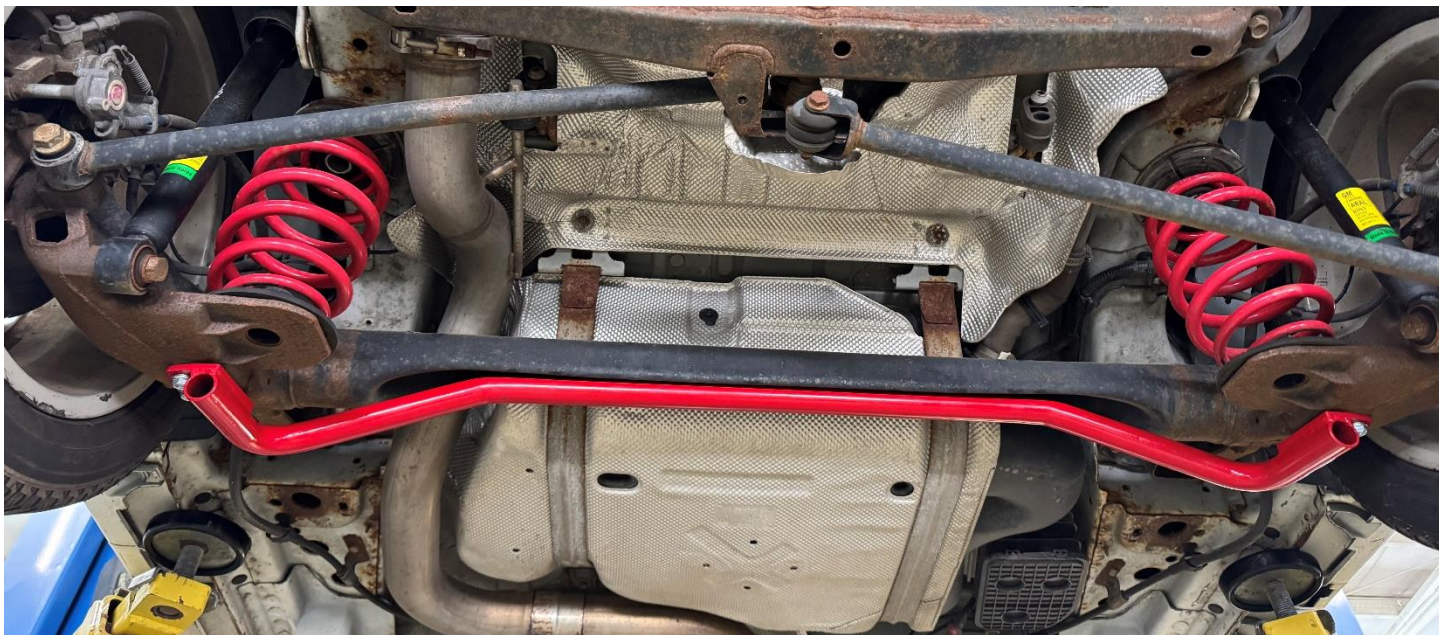

Estimated Installation Time: 1 Hour

Installation Difficulty: 2/5

Kit Contents:

- ZZP Rear Sway Bar
- 2 Nut Mounting Plates
- 4 Bolts

Tools Needed:

- Socket set
- Ratchet




STEP ONE:

- Install the nut mounting plates into the oval holes in the rear beam.

STEP TWO:

- Install all 4 bolts finger tight before tightening fully.

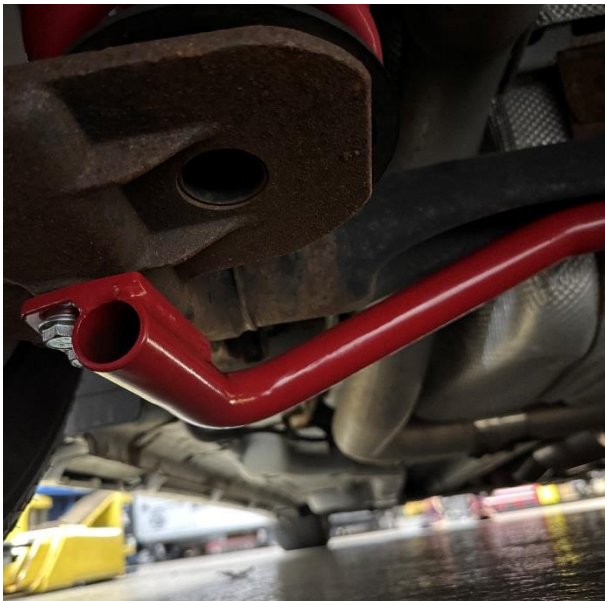

STEP THREE:

- The sway bar should be aligned with the pocket in the rear beam.
- Make sure there is no contact between the sway bar and the rear beam.

