


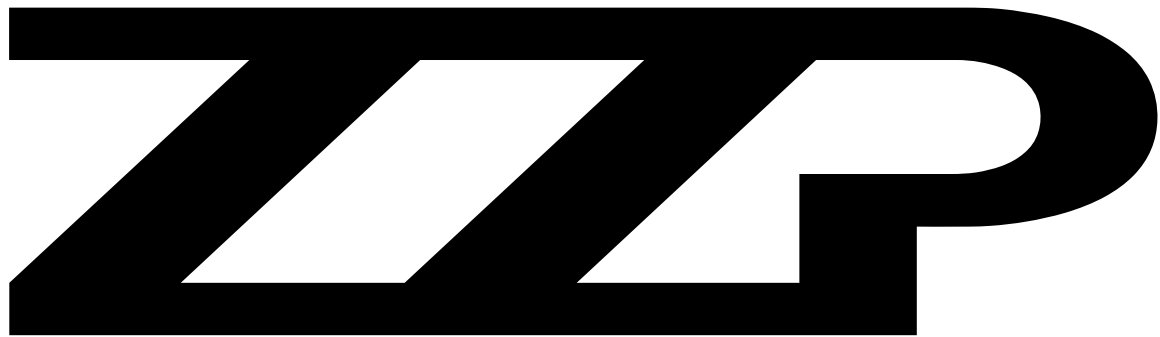

ZZPERFORMANCE

Installation Instructions

ZZP Rear Sway Bar

Gen 2 Chevy Cruze



Estimated Installation Time: 1 Hour

Installation Difficulty: 2/5

Kit Contents:

- ZZP Rear Sway Bar
- 2 Nut Mounting Plates
- 4 Bolts

Tools Needed:

- Socket set
- Ratchet
- Electric Drill
- Drill Bits



STEP ONE:

- Set nut plates on top of the rear beam spring seat and align rear nut with the existing hole in the rear beam.

STEP TWO:

- Install sway bar using only the rear mounting bolts.
- Make sure the bar is aligned with the pocket in the rear beam and is not contacting the rear beam.



STEP THREE:

- With the rear bolts tightened, mark or center punch the rear beam for the front mounting holes of the sway bar.

STEP FOUR:

- You may choose to leave the bar in place or remove it after marking the holes.
- You can use some blue tape to protect the bar from the drill bit.

**STEP FIVE:**

- Drill the center of your marks up to 7/16" or 1/2" drill size.
- Remove the sway bar and clean the holes.
- Paint the bare metal to protect from rust.

**STEP SIX:**

- Install the sway bar using the 4 provided bolts.
- Install all 4 bolts finger tight before tightening fully.



STEP SEVEN:

- The bar should be aligned with the rear beam.
- Make sure there is no contact between the sway bar and the rear beam.

