

## Slingshot Master Cylinder Brace

### Install Instructions



### Component List:

<u>QTY</u>	<u>Description</u>
------------	--------------------


<b>1</b>	ZZP Slingshot master cylinder brace
<b>2</b>	Swivel foot
<b>1</b>	M8 x 25 socket head bolt Stainless
<b>1</b>	M8 washer Stainless
<b>1</b>	M6 x 35 socket head bolt Stainless-Fully threaded
<b>1</b>	M6 Fender washer Stainless
<b>1</b>	M6 Flange nut Stainless

### Tools needed:

T25 torx socket  
ratchet  
5mm allen wrench  
6mm allen wrench  
10mm wrench  
13mm wrench

## Installation

1. Use T25 socket to remove bolt circled in the picture.

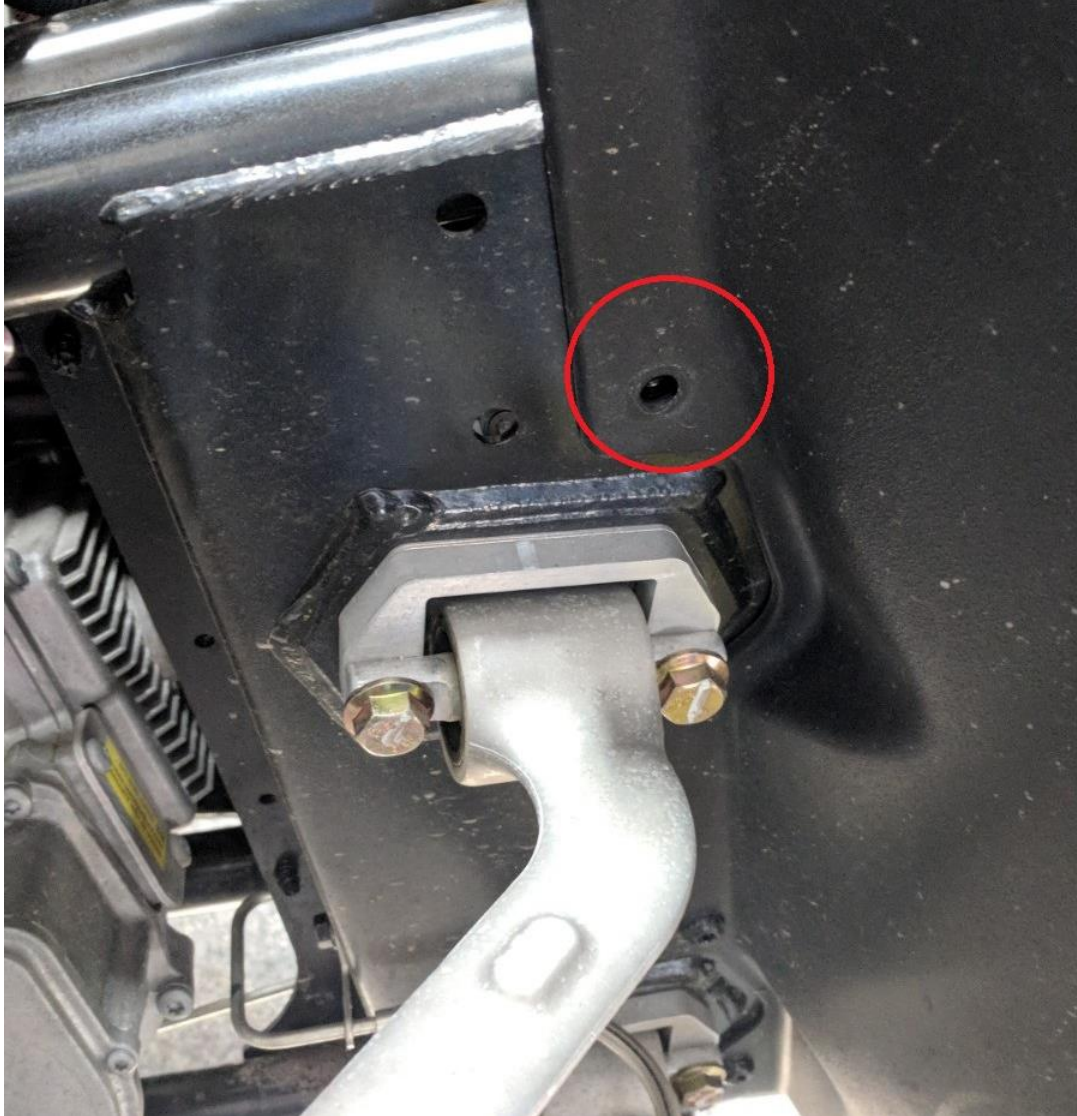

2. Use M6 bolt and washer to replace the bolt removed in the first step. This bolt threads into a nut welded to the chassis. Tighten bolt.

3. Position master cylinder brace over M6 bolt, install M8 bolt and washer in empty hole that lines up with the master cylinder brace.



4. Thread M6 flange nut onto the M6 bolt and tighten.



5. Adjust foot till it rests on the end of the master cylinder, then use 13mm wrench to turn adjuster 1/3 turn further. This pre-loads master cylinder for max effectiveness.
6. Tighten jam nut with 13mm wrench.
7. Enjoy a firmer brake pedal and increased responsiveness!